


Step 1

The plexiglass will stick on your window with white or black **velcro** on the window like the red line indicates in the photo on the right.


Please read these 4 steps and then draw a picture of your window.

How to Measure your Window for Correct Installation

*Follow the same procedure for vertical measurements

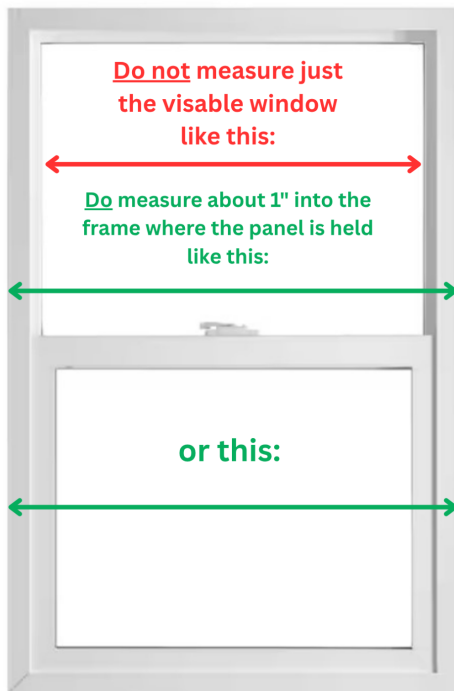


*Then Identify if your window is a VERTICAL orientation or HORIZONTAL orientation

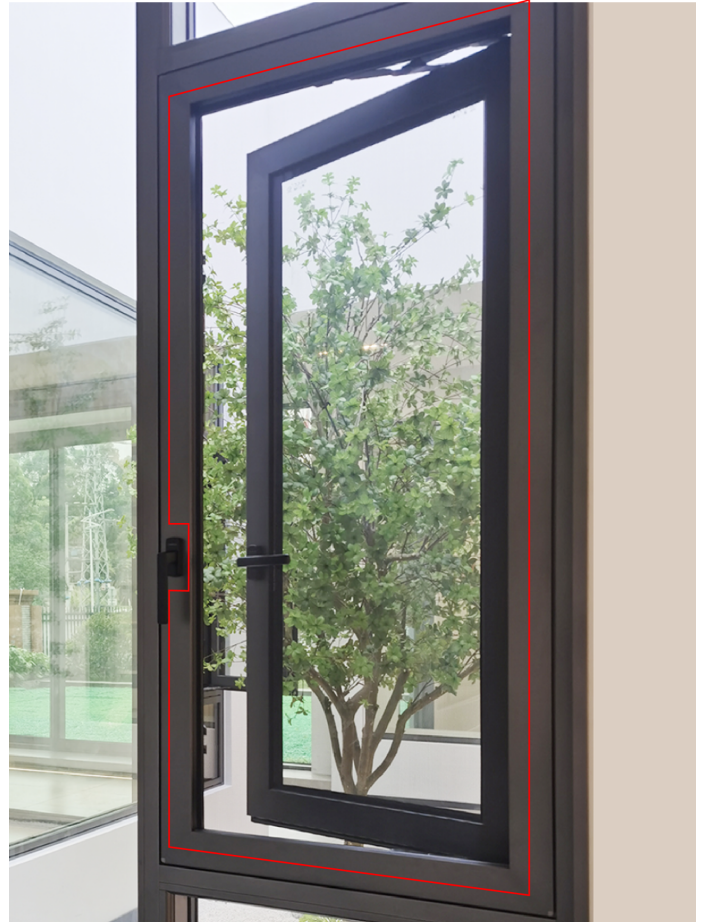

Step 2

How to Measure the Opening

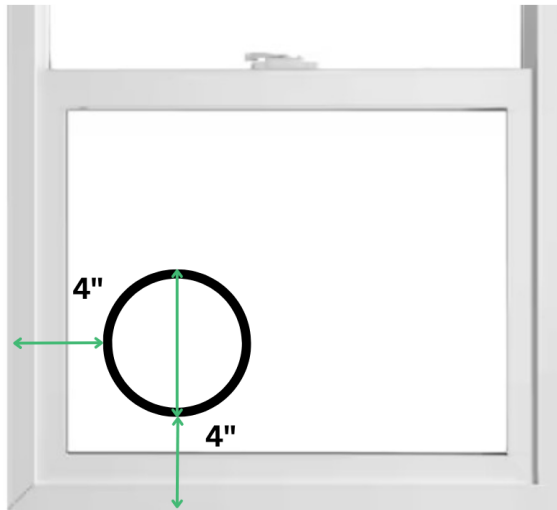

1. Add Diameter of Opening

2. Add Distance From Left Side and Distance from Bottom

Note: We Recommend at least 4" in from edge for the best structural integrity.


If your Opening is not circular:

- 1. Check if attachment comes off so we can use just the hose part
(this looks better and stays secure)**
- 2. If not, send us a photo and attach your phone number
(we may have your hose type in stock)**

Step 3

Does your window have a frame obstruction?

Frame Obstruction

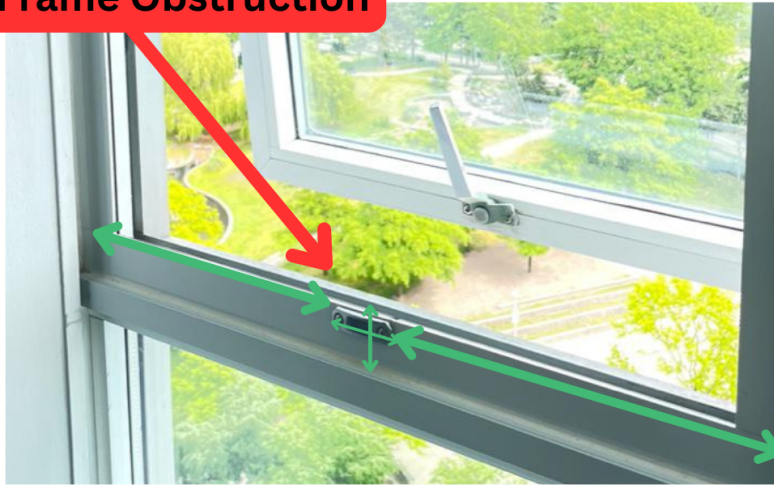

Step 4

Draw out window measurements

